

**1. Features**

Clock display, 10 sets of adjustable timed power control, randomized power control, manual switch and optional "DST" (daylight saving time) setup.

**2. First time charging**

This timer contains a rechargeable battery. It is normal that the new/old model runs out of battery if it wasn't being charged for a long period of time. In this case, the screen will not turn on.

To charge : simply plug the timer to a power outlet. The charging time should take at least 15 minutes.

If the screen doesn't light up or displays garbled characters, simply reboot the system by pressing the "RESET" button.

**3. Set clock**

Hold "CLOCK" button and "WEEK" button to adjust week.

Hold "CLOCK" button and "HOUR" button to adjust hour.

Hold "CLOCK" button and "MINUTE" button to adjust minute.

Hold "CLOCK" button and "TIMER" button to select 12 hour/24

hour display.

Hold "CLOCK" button and "ON/AUTO/OFF" button to enable/disable "DST" (daylight-saving-time).

**4. Set timer**

Press "TIMER" button, select and set timer. Setting rotation : 1on, 1off, 2on, 2off, ..... , 10on, 10off.

Press "HOUR" button to set hour for timer.

Press "MIN" button to set minute for timer.

Press "WEEK" button to set weekday for timer. Multiple weekdays can be selected. ex:

if selected "MO", the timer will

only apply on every Monday;

if selected "MO, WE, FR", the timer

will apply on every Monday,

Wednesday and Friday.




Press "RES/RCL" button to cancel the selected on or off timer.

The screen will show "-----".

the timer is canceled.

Press "RES/RCL" button

again to reactivate the timer.

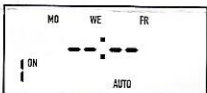

When timers are set, press "CLOCK" to quit timer setting and return to clock.

**5. Random function**

Press "RANDOM" button to activate

random function, press again to

cancel function.

System only runs random function

when "AUTO" is on.

Random function will automatically start the timer from 2 to 32 minutes after the setting.

ex : if timer 1on was set to 19:30 with the random function on, the timer will activate randomly between 19:33 to 20:03.

if timer 1off was set to 23:00 with the random function on, the timer will activate randomly between 23:02 to 23:32.

To avoid overlapping, make sure to leave a minimum of 31 minutes gap between different sets of timer.

**6. Manual control**

**Displayed features:** ON : socket turns on / OFF : socket turns off.

AUTO : socket turns on/off automatically via timer.

**Manual ON setting:** Press "ON/AUTO/OFF" button to switch from

"AUTO" to "ON".

This mode allows socket of the device to power up.

Power indicator will light up.

**Manual OFF setting:** Press "ON/AUTO/OFF" button to switch from

"AUTO" to "OFF".

This mode turns socket of the device off. Power indicators will turn off.

"CLOCK" button clock

"WEEK" button week

"HOUR" button hour

"MINUTE" button minute

"TIMER" button timer

"RES/RCL" button clear settings

"DST" selection daylight saving time

"AUTO" selection automatic

"MO" selection Monday

"TU" selection Tuesday

"WE" selection Wednesday

"TH" selection Thursday

"FR" selection Friday

"SA" selection Saturday

"SU" selection Sunday